A. "On/Off" indicator
B. "On/Off" button
C. "Intensive Rinse" button
D. "Rinse Hold" button
E. Spin speed reduction button
F. Drying Programme selector knob
G. Washing Temperature selector knob
H. Washing Programme selector knob

Red panel labels are printed in blue in the Instructions for Use and in the Programme Chart.

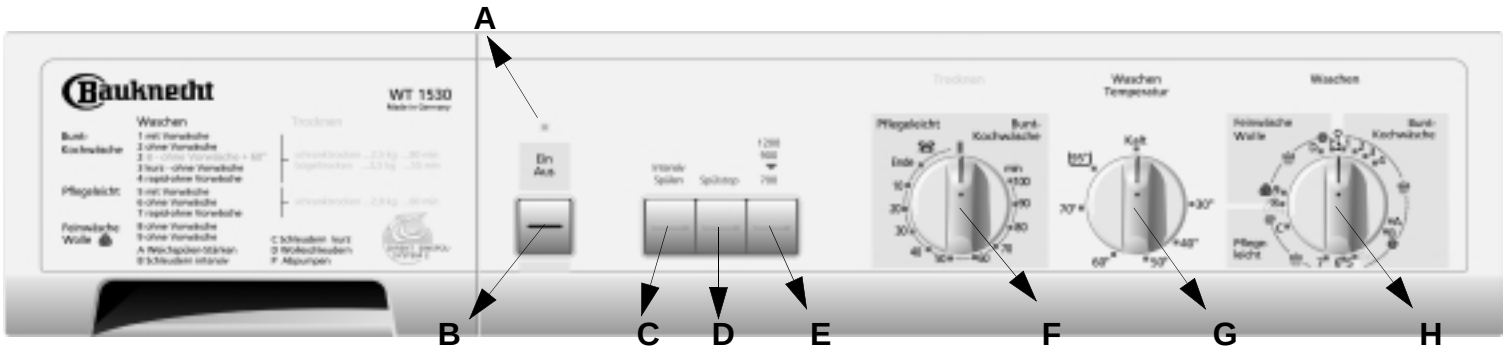

Programme	Care Label	Type of fabric / Degree of soiling / Notes	Max. Load	Detergent and Additives			Selectable Special Options = ❊			Selector							Programme duration Washing [3]
				Soft-tener	Main Wash	Pre-wash	Intensive Rinse	Rinse Hold	Spin Speed Reduction [1]	Temperature Selector	Programme Selector	Programme Selector Drying					
			kg						rpm	°C	Washing	Max. Load		1.0 kg	1.5 kg	2.0 kg	2.5 kg	approx. Min.
Cotton / Coloured cotton	95 60 40 30	Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	Washing 5.0 Drying 2.5	❊	yes	❊	❊	—	1200 ▼ 700	Cold to 95	Cotton / Coloured cotton **1 - 4**	Cupboard dry	1st Load**	35-45 Min.	45-55 Min.	55-65 Min.	65-80 Min.	115-60
													2nd Load	30-40 Min.	40-50 Min.	50-60 Min.	60-75 Min.	
												Iron dry	1st Load**	25-35 Min.	25-35 Min.	35-45 Min.	45-55 Min.	
													2nd Load	25-30 Min.	25-35 Min.	35-45 Min.	40-50 Min.	
Synthetics	60 50 40 30	Average to slightly soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	Washing 2.5 Drying 2.0	❊	yes	❊	—	❊	900 ▼ 700 [2]	Cold to 60	Synthetics **5 - 7**	Cupboard dry*	1st Load	30-40 Min.	35-50 Min.	45-60 Min.	—	70-45
Delicates	30 40	Curtains and delicate dresses, skirts, shirts and blouses.	Washing 1.5	❊	yes	❊	—	❊	900 ▼ 700 [2]	Cold to 40	Delicates **8**	—						40
Wool		Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. If you select "Rinse Hold", do not leave the wash in the rinsing water for too long.	Washing 1.0	❊	yes	—	—	❊	900 ▼ 700 [2]	Cold to 40	Wool **9**	—						35
Rinse + Spin	—	Programme for treating with starch or softener. Finishes with an intensive spin cycle. Same as the spin cycle in the Cotton Coloured programme.	5.0	❊	—	—	—	—	1200 ▼ 700	Cold	Rinse + Spin **A** +	—						—
Gentle spin	—	Programme for gentle spin cycle. Same as the spin cycle in the Wool programme.	1.5	—	—	—	—	—	900 ▼ 700 [2]	—	Gentle Spin	—						—
Draining	—	Draining only - no spinning. Alternative way of terminating programmes after "Rinse Hold".	—	—	—	—	—	—	—	—	Draining **P**	—						—

1) Do not reduce speed if subsequent drying is required.
2) To protect the garments, the spin speed is limited to 900 rpm in this programme.
3) The stated programme duration is an approximate value at maximum temperature, but without special options.

❊ : optional / yes : dosing required

** These values also apply to washing and drying in a single cycle.
* For crease-free items the load should be reduced to 1.5 kg.

Consumption Data * - Washing

(Programme selection only for guidance)

Programme	Washing						Drying 1200 rpm		
	Temperature (°C)	Programme selection	Load (kg)	Energy (kWh)	Water consumption (l)	Programme duration approx. Min.	Energy (kWh)	Time	Water (l)
Cotton, without Prewash**	95	2	5.0	1.80	59	115			
Cotton, without Prewash, Int. Rinse**	95	2	5.0	1.80	65	115			
Coloured Cotton, without Prewash**	60	2	5.0	1.10	59	115			
Coloured Cotton, without Prewash**	60	2	2.5***	0.90	43	115	1.70	70	24
Cotton / Coloured Cotton Short	60	3	5.0	1.00	59	90			
Coloured Cotton	40	2	5.0	0.55	59	115			
Synthetics	60	6	2.5	0.70	45	65			
Synthetics	40	6	2.0***	0.40	45	65	1.20	55	20
Synthetics Rapid	40	7	1.5	0.40	42	35	0.90	47	18
Wool	40	9	1.0	0.60	68	50			

Consumption Data * - Drying

Drying mode	Washing Spin Speed rpm	Load (kg)	Energy consumption (kWh)	Water consumption (l)	Programme duration approx. Min.
Cotton / Coloured Cotton		5			
Cupboard dry 2.5 kg	1200	1st Load 2.5	1.7	24	70
Cupboard dry 2.5 kg	1200	2nd Load 2.5	1.6	26	65
Iron dry	1200	2.5	1.10	19	53
Synthetics					
Cupboard dry 2.0 kg	900	2.0	1.20	20	55
Cupboard dry 1.5 kg	900	1.5	0.90	18	47

* The stated values are guidelines according to international standard conditions (EN50229)
** For programmes with Prewash the water consumption will be approx. 7l more, the energy consumption approx. 0.4 kWh higher and the programme duration approx. 15 minutes longer.
*** Optimal load for washing and drying in a single cycle.

PROGRAMME SELECTION AND SEQUENCE OF OPERATION

Programme Selection and Sequence of Operation.

A. Washing only

1. Select programme Ⓘ,
2. Select temperature Ⓗ,
3. Drying programme selector knob Ⓖ must point to ▮ symbol,
4. Select the desired special options,
5. Press the “On/Off” button Ⓒ.

B. Washing and drying in a single cycle +

1. Select programme Ⓘ,
2. Select temperature Ⓗ,
3. Select drying time Ⓖ,
4. Select the desired special options,
5. Press the “On/Off” button Ⓒ.

C. Drying only without prior washing

1. Turn Programme selector knob Ⓘ to red ,
2. Only then select drying programme Ⓖ,
3. Press the “On/Off” button Ⓒ.

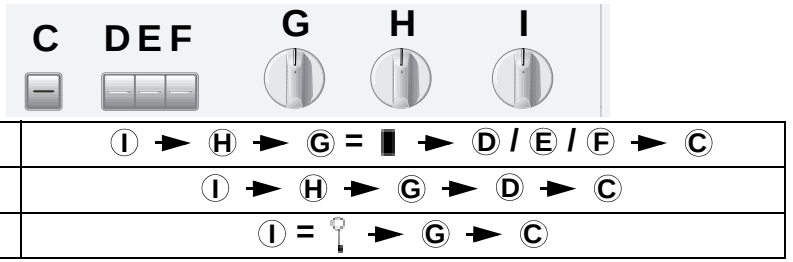

Installation

- **Before using your appliance read carefully the Installation Guide and the Instructions for Use provided.**
- Your appliance is fitted with transit bolts to prevent internal damage during transport. Before using the machine you MUST remove the transit bolts (see “Installation Guide”)
- Fasten the lock nut after the appliance feet have been adjusted in order to prevent vibration and noise.

Washing

- Sort laundry, empty all pockets, close zips and fasteners.
- Add detergent according to the manufacturer’s instructions.
- Select washing programme according to type of fabric and degree of soiling.

Drying

- Select drying programme according to type of fabric, load and drying mode.
- Follow care label instructions.

Suitable for machine drying.

Not suitable for machine drying.